
BUCKINGHAM MFG.

PN 21401C – HOOK & LOOP FASTENER FOOT STRAPS FOR RING TYPE CLIMBERS ATTACHMENT INSTRUCTIONS

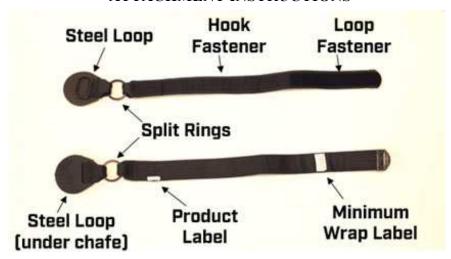

Note: hardware / colors may vary from that shown.

Attach the foot strap to the climber by separating the split ring and inserting it thru the climber ring as shown in Fig. 1. Rotate the split ring until it is completely inside the climber ring. Ensure the steel loop is towards the front of your foot and the hook and loop fastener is facing down when the strap is lying flat as shown in Fig. 2.



Fig. 1

Step into the climber (Fig. 2).



Wrap the footstrap around the back of your ankle and over the top of your

foot. Ensure the hook and loop fastener is facing up when the strap is on top of your foot (Fig. 3).



Pull the end of the foot strap through the slot of the steel loop until the strap is snug on your foot (Fig. 4).



Fig. 4

Fold the foot strap over the top bar of the steel loop. Always ensure that the minimum wrap label as a minimum has been pulled through the steel loop (Fig. 5). This ensures a proper wrap. Failure to do so may cause release, resulting in serious injury or death. Align and attach the hook fastener to the loop fastener (Fig. 5 & 6).



Fig. 5

If the minimum wrap label will not pull through the steel loop do not use the strap. Replace the strap with a longer one to ensure proper bonding of the hook and loop fastener.



Fig. 6

BUCKINGHAM MFG. CO. BINGHAMTON, NY 1-800-937-2825 www.buckinghammfg.com